

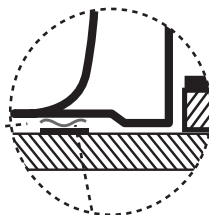


ATTENZIONE ! - ATTENTION !

ISTRUZIONI PER L'ISTALLAZIONE DEI PIATTI DOCCIA

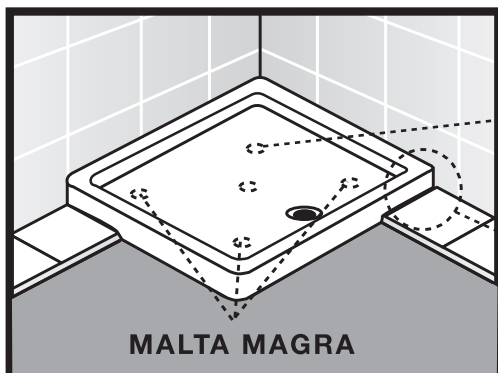

FOLGIO DI PLASTICA O CARTA

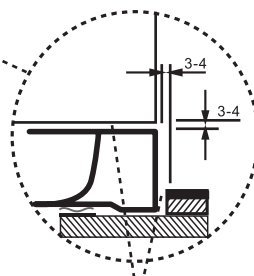

SILICONE ANTIMUFFA O
MALTE EQUIVALENTI

- 1 - Installare la piletta sul piatto doccia in direzione dello scarico principale ed accertarsi dell'assenza di perdite.
- 2 - Posizionare il piatto doccia sui punti di appoggio realizzati con malta magra (in corrispondenza degli angoli e al centro).
- 3 - Interporre un foglio di plastica o carta tra il piatto doccia e la malta per evitare che le due superfici si incollino.
- 4 - Alloggiare il piatto doccia tenendo conto dello spessore del rivestimento e verificare il corretto posizionamento con una livella (N.B. livellare innanzi tutto le superfici dove poggierà il box).
- 5 - Dopo la presa della malta procedere con il maiolicato facendo attenzione che le maioliche non poggino sulla superficie del piatto doccia (3 - 4 mm) onde evitare rotture della ceramica a seguito di assestamento. Sigillare il tutto con silicone antimuffa o malte elastiche.

RISPETTARE LE SUDETTE ISTRUZIONI PER MANTENERE LA GARANZIA

INSTRUCTIONS FOR THE INSTALLATION OF SHOWER TRAY

1. Install the exhaust pipe on the shower tray in the direction of the main drain and check the absence of water leaking.
2. Put the shower tray over the backing points made with mortar in the corners and in the centre of the piece.
3. Interpose a sheet of plastic or paper between the shower tray and the mortar to avoid that the two surfaces should stick.
4. Settle the shower tray after having checked the thickness of flooring and then controlling the right position of the piece with a level (N.B. It's essential to level particularly the surfaces where the cabine will be put).
5. When the mortar has set, proceed with maiolicas; take care that they should not lean over the shower tray (3-4 mm) to avoid breaks after bonds. Seal with anti-mould silicone or elastic mortar.

YOU HAVE TO RESPECT THE INSTRUCTIONS TO KEEP THE GUARANTEE

ATTENTION!

Plastic or paper sheet

Anti-mould silicone or similar mortars

ART CERAM SRL

Sede legale e stabilimento: Via Monsignor Tenderini snc
01033 Civita Castellana (vt) - Italia - tel. 0761.599499 r.a. - fax 0761.514232
www.artceram.it - e-mail: info@artceram.it